



OBU S550



LED sign	Sound*	What's mean?	What to do?
GREEN LED		ETS BALANCE	
Continuous light	No sound	ETS balance OK	No action
Sparse blinking	3 short beep	ETS balance is low	Upload ETS balance
Constantly blinking	4 long beep	ETS balance is "0"	Upload ETS balance

LED sign	Sound*	What's mean?	What to do?
BLUE LED		WORK STATE	
Continuous light	No beep	GPS and GSM working properly	No action
Sparse light	3 short beep	GSM connection failed	Start the car and watch whether the condition disappears within a short time
Sparse blinking	4 long beep	GPS signal not working (VERY IMPORTANT!)	Check for proper placement of the OBU, a clear view of the sky **
No light	4 long beep	GSM and GPS not working	Check for proper placement of the OBU, a clear view of the sky **

LED sign	Sound*	What's mean?	What to do?
RED LED		POWER SUPPLY	
Continuous light	No sound	Accu charged, normal power supply	No action
Constantly blinking	No sound	Accu charging	No action
No light	1 long beep the PSU OFF	No power	Check the power cable

OTHER SIGNALS			
1 long beep		Power supply ending	Check the power cable
1 short beep		Power supply start	Check the LED station
2 short beep, and 2 short beep again		Device working properly	No action

* New or old equipment with upgraded software! The beeps indicate continuously during the existence of the problem! (OBU Quick Start Guide 9. site) The software of the older devices can also be updated!

** Choosing a location on the vehicle windscreen near. Do not be near the unit other countries declaring toll device, a unique license plate, etc.



Online OBU operation checking: <http://www.icell.hu>

IF THE INDICATED IS STILL A PROBLEM, PLEASE CONTACT YOUR FLEET OPERATOR AND BUY ROUTE TICKETS USE OF TOLL ROADS